



fig. 4



- 1 - Manopola di riarmo
- 2 - Connettore
- 3 - Bobina elettrica
- 4 - Corpo valvola
- 5 - Viti di fissaggio
- 6 - Coperchio

fig. 4



- 1 - Manette de réarmement
- 2 - Connecteur
- 3 - Bobine électrique
- 4 - Corps soupape
- 5 - Vis de fixation
- 6 - Couvercle

fig. 4



- 1 - Reset handgrip
- 2 - Connector
- 3 - Electrical coil
- 4 - Body valve
- 5 - Fixing screws
- 6 - Cover

fig. 4



- 1 - Bóton de rearme
- 2 - Conector eléctrico
- 3 - Bobina eléctrica
- 4 - Cuerpo válvula
- 5 - Tornillos de fijación
- 6 - Tapa



Attacchi Connections Fixations Conexiones	Voltage Voltage Voltage	P. max = 500 mbar		P. max = 6 bar	
		Code Code Code	Code Code Code	Code Code Code	Code Code Code
DN 65	12 Vdc	EX08	001	EX080000	001
DN65 2-1/2" 500mbar or 6bar 12Vdc	12 V/50 Hz	EX08	010	EX080000	010
	24 Vdc	EX08	005	EX080000	005
	24 V/50 Hz	EX08	003	EX080000	003
	110 V/50 Hz	EX08	002	EX080000	002
DN 80	230 V/50-60 Hz	EX08	008	EX080000	008
	12 Vdc	EX09	001	EX090000	001
	12 V/50 Hz	EX09	010	EX090000	010
	24 Vdc	EX09	005	EX090000	005
DN80 3" 500mbar or 6bar 12Vdc	24 V/50 Hz	EX09	003	EX090000	003
	110 V/50 Hz	EX09	002	EX090000	002
	230 V/50-60 Hz	EX09	008	EX090000	008
	12 Vdc	EX10	001	EX100000	001
DN100 4" 500mbar or 6bar 12Vdc	12 V/50 Hz	EX10	010	EX100000	010
	24 Vdc	EX10	005	EX100000	005
	24 V/50 Hz	EX10	003	EX100000	003
	110 V/50 Hz	EX10	002	EX100000	002
	230 V/50-60 Hz	EX10	008	EX100000	008